

BNC Output Jack (Diagnostic Signal)

The rear panel BNC socket gives a multiplexed output showing the signals from all eight accelerometers. To view this signal on an oscilloscope, set the time base to 20 msec and the sensitivity to 1 V.

It is strongly recommended that you observe this signal, with the isolation switch both on and off when using the system for the first time. Doing so gives a good impression of how well the system is operating.

