

***External Power Supply***  
***TS-15OLP / TS-14OLP / TS-30OLP***

***Modification Instructions***




**Address:**  
Im Grindel 6  
CH-8932 Mettmenstetten  
Switzerland


**Phone:** +41 (0)44 776 33 66  
**Fax:** +41 (0)44 776 33 65  
**E-Mail:** [info@tablestable.com](mailto:info@tablestable.com)  
**Internet:** [www.tablestable.com](http://www.tablestable.com)

**Address:**  
Im Grindel 6  
CH-8932 Mettmenstetten  
Switzerland

**Phone:** +41 (0)44 776 33 66  
**Fax:** +41 (0)44 776 33 65  
**E-Mail:** [info@tablestable.com](mailto:info@tablestable.com)  
**Internet:** [www.tablestable.com](http://www.tablestable.com)

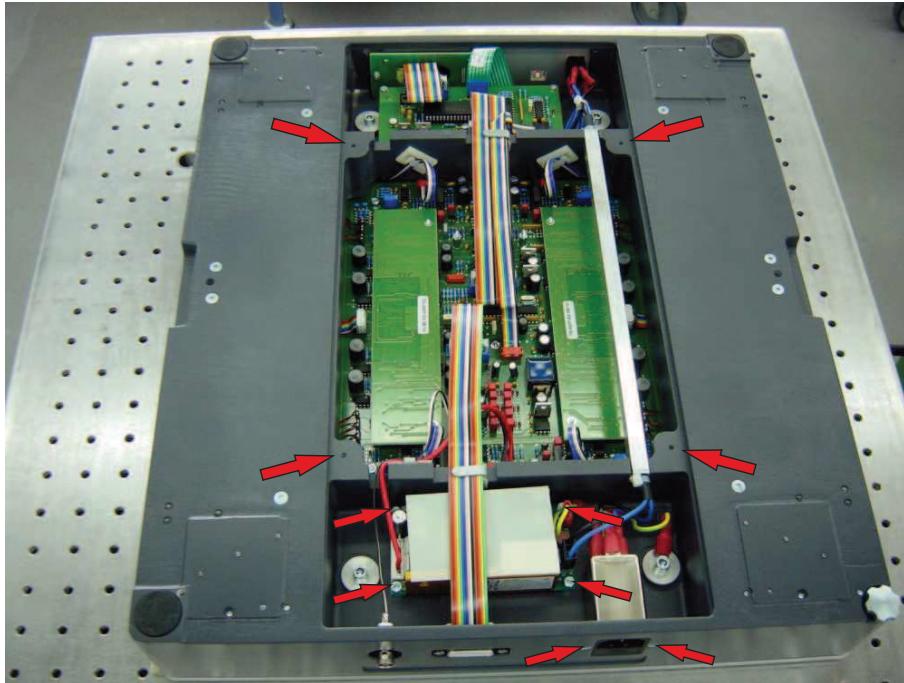


Disconnect from main and remove the bottom cover.  
Undo four nuts from the power supply, undo the screw from the ground connection,  
and two screws from the power socket.

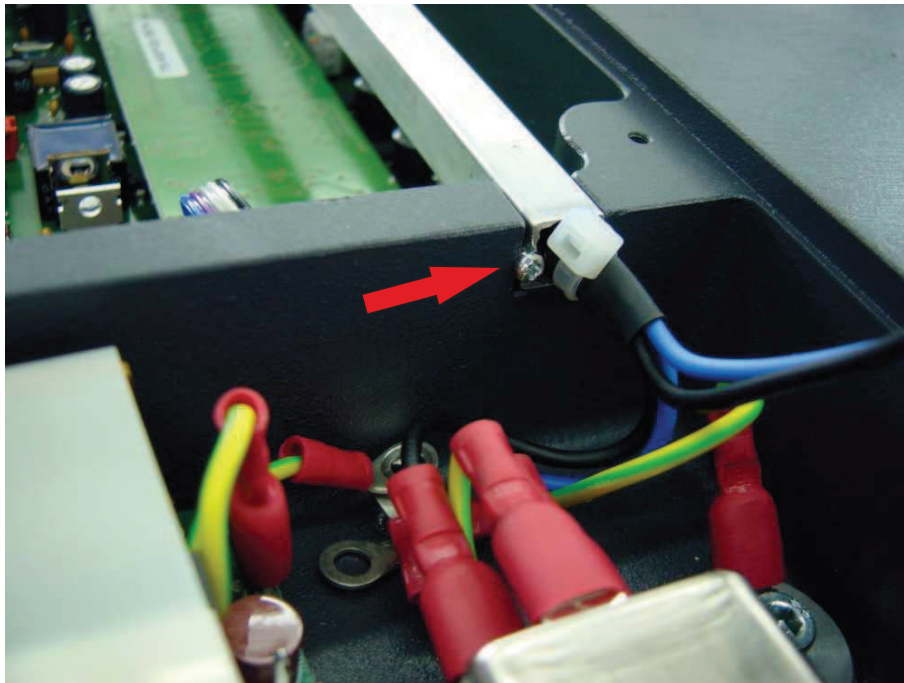


Undo two screws which hold the aluminium tube in place

**Address:**  
Im Grindel 6  
CH-8932 Mettmenstetten  
Switzerland

**Phone:** +41 (0)44 776 33 66  
**Fax:** +41 (0)44 776 33 65  
**E-Mail:** [info@tablestable.com](mailto:info@tablestable.com)  
**Internet:** [www.tablestable.com](http://www.tablestable.com)

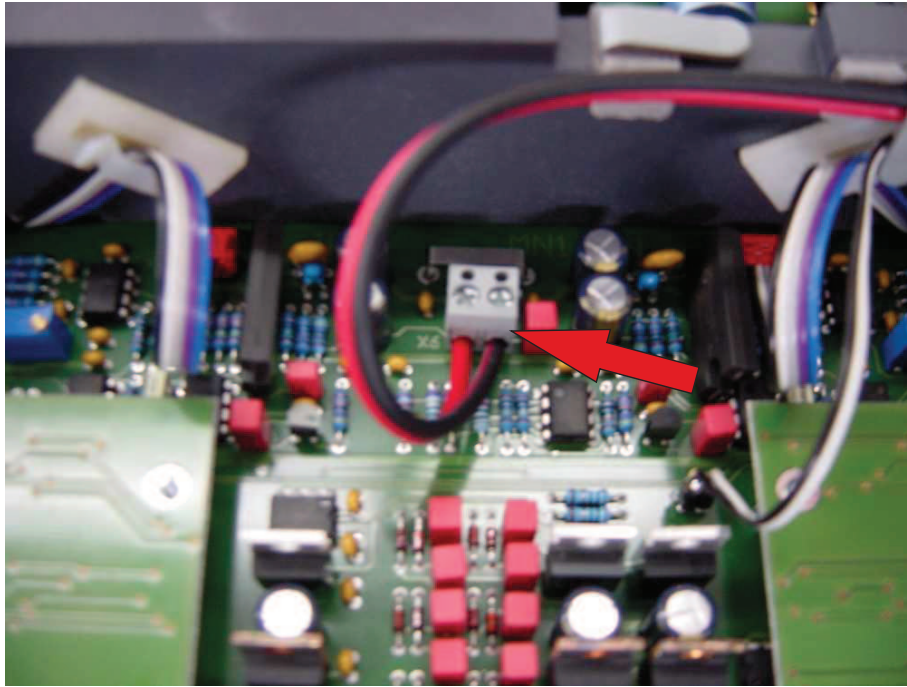

Disconnect the power input cable

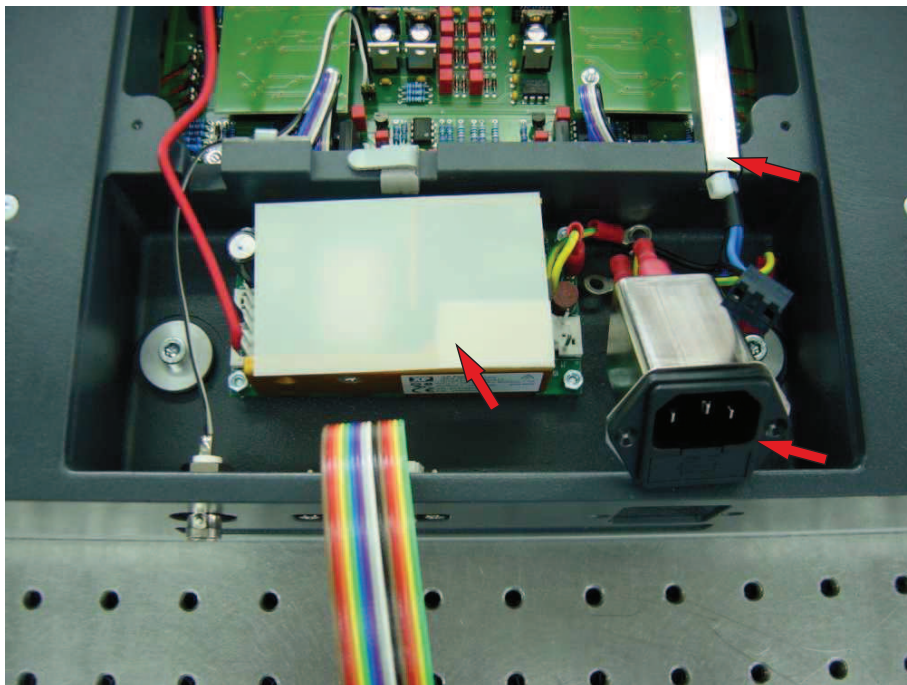


Remove power supply and power socket




**Address:**  
Im Grindel 6  
CH-8932 Mettmenstetten  
Switzerland

**Phone:** +41 (0)44 776 33 66  
**Fax:** +41 (0)44 776 33 65  
**E-Mail:** [info@tablestable.com](mailto:info@tablestable.com)  
**Internet:** [www.tablestable.com](http://www.tablestable.com)

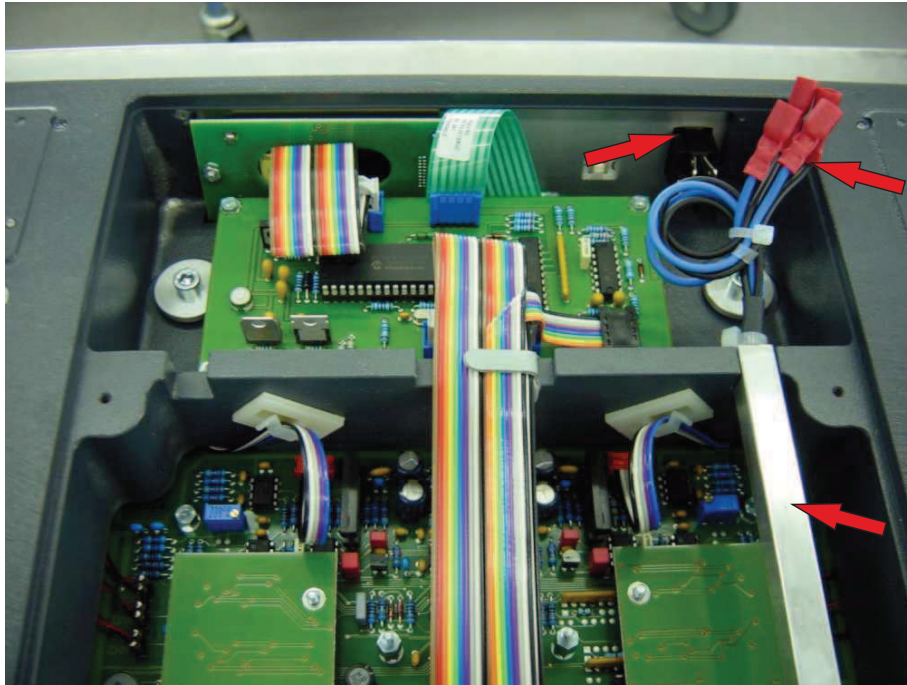

Unplug the cables from the switch and remove the aluminium tube

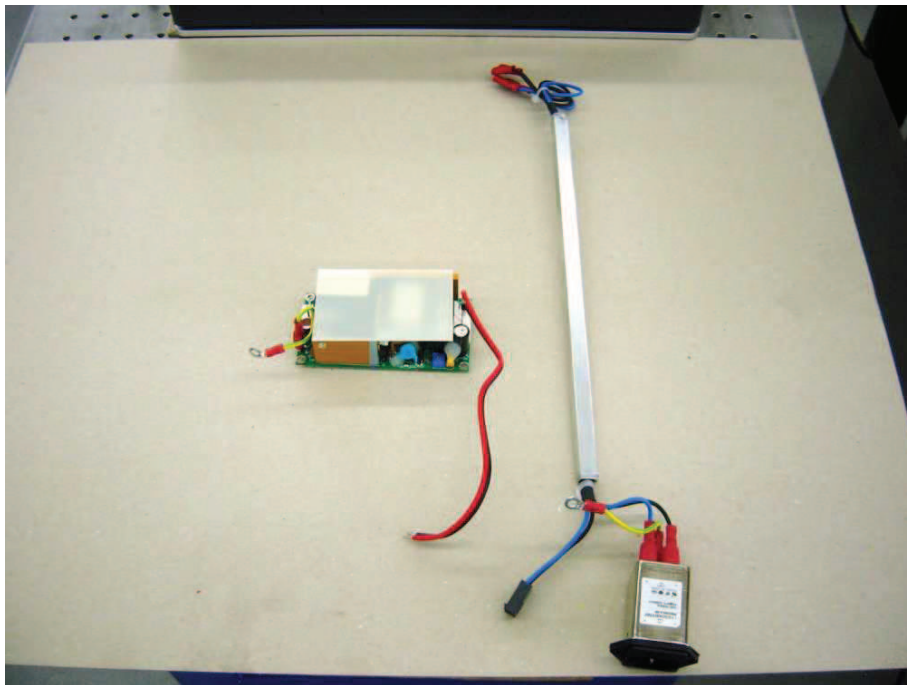

**Address:**  
Im Grindel 6  
CH-8932 Mettmenstetten  
Switzerland

**Phone:** +41 (0)44 776 33 66  
**Fax:** +41 (0)44 776 33 65  
**E-Mail:** [info@tablestable.com](mailto:info@tablestable.com)  
**Internet:** [www.tablestable.com](http://www.tablestable.com)




Replace the power switch with the cover provided




**Address:**  
Im Grindel 6  
CH-8932 Mettmenstetten  
Switzerland

**Phone:** +41 (0)44 776 33 66  
**Fax:** +41 (0)44 776 33 65  
**E-Mail:** [info@tablestable.com](mailto:info@tablestable.com)  
**Internet:** [www.tablestable.com](http://www.tablestable.com)

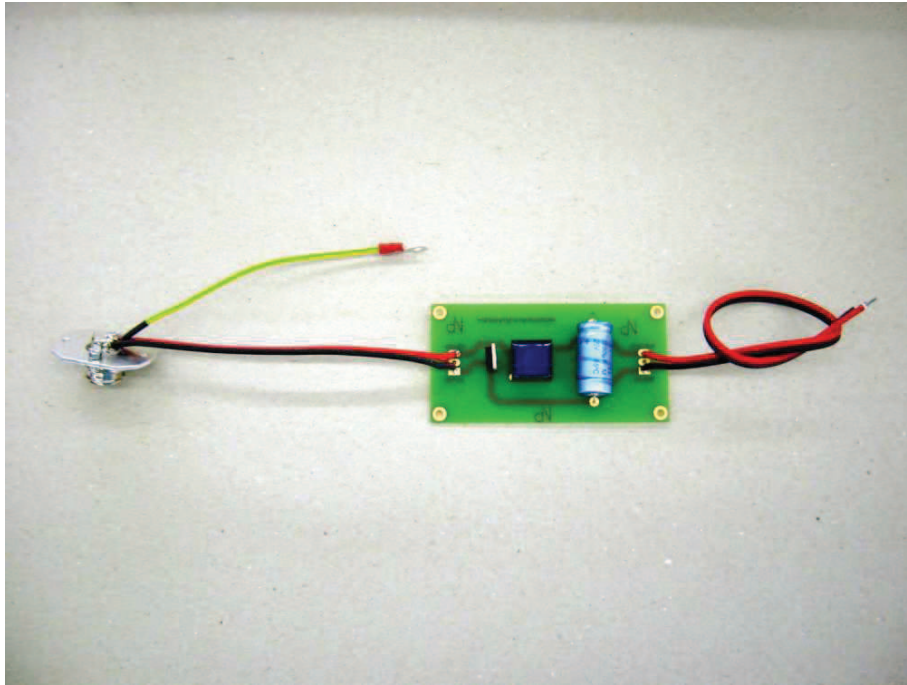

New power harness

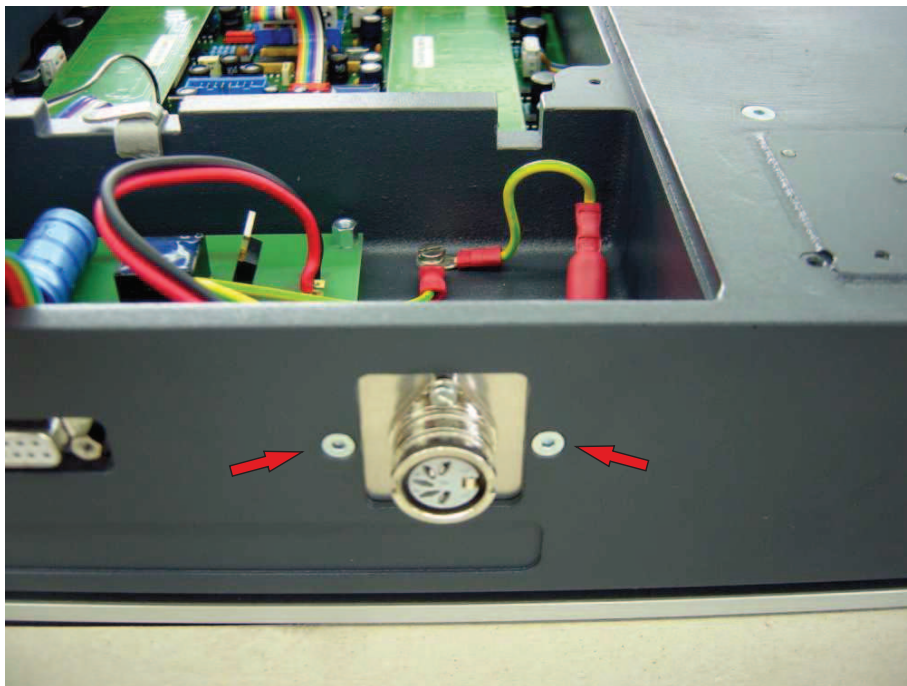


Attach new input socket




**Address:**  
Im Grindel 6  
CH-8932 Mettmenstetten  
Switzerland

**Phone:** +41 (0)44 776 33 66  
**Fax:** +41 (0)44 776 33 65  
**E-Mail:** [info@tablestable.com](mailto:info@tablestable.com)  
**Internet:** [www.tablestable.com](http://www.tablestable.com)

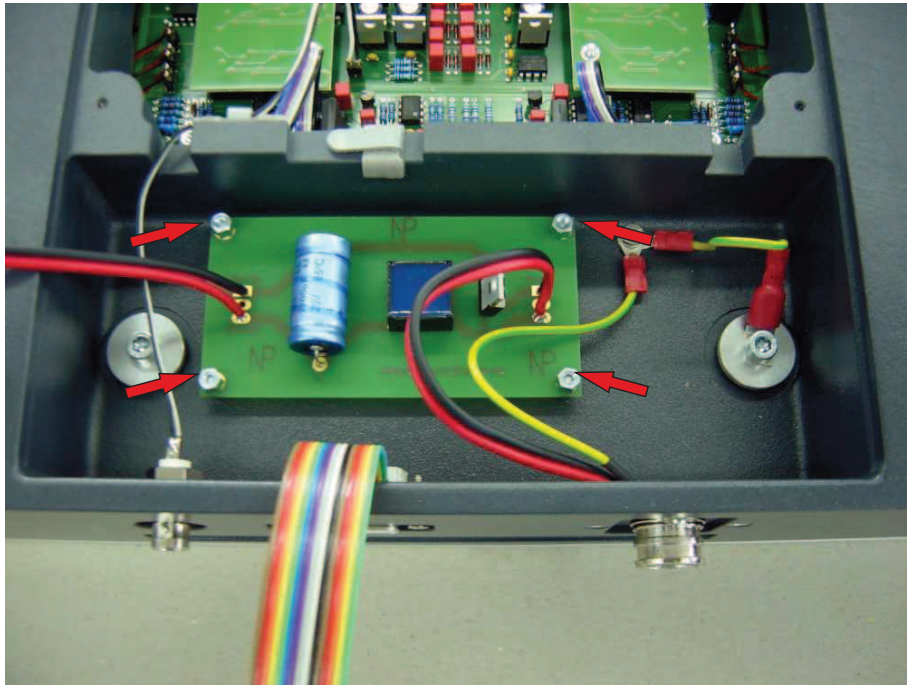


Attach power board and ground connection

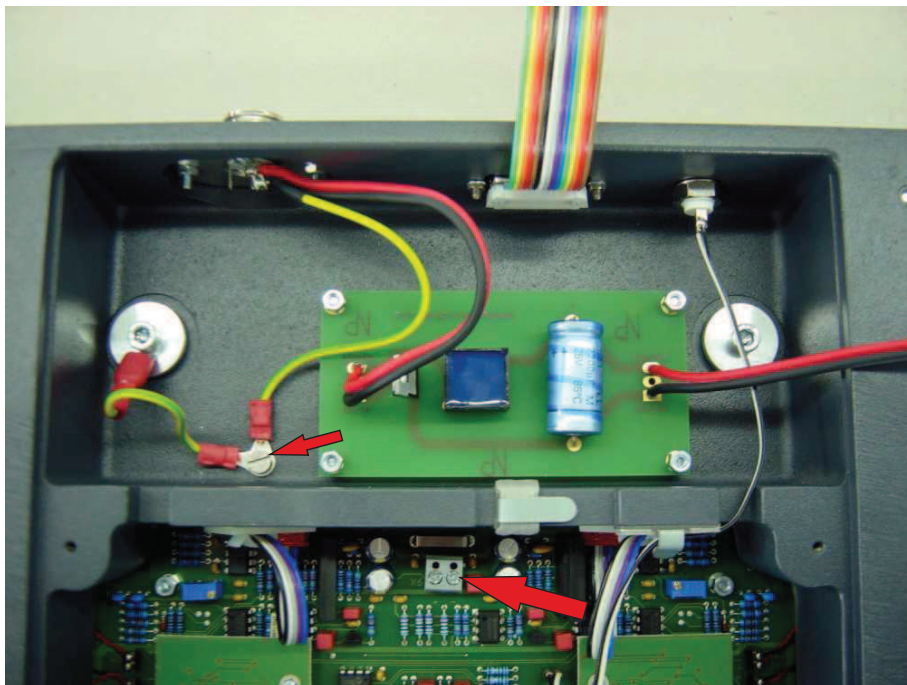


**Address:**  
Im Grindel 6  
CH-8932 Mettmenstetten  
Switzerland

**Phone:** +41 (0)44 776 33 66  
**Fax:** +41 (0)44 776 33 65  
**E-Mail:** [info@tablestable.com](mailto:info@tablestable.com)  
**Internet:** [www.tablestable.com](http://www.tablestable.com)

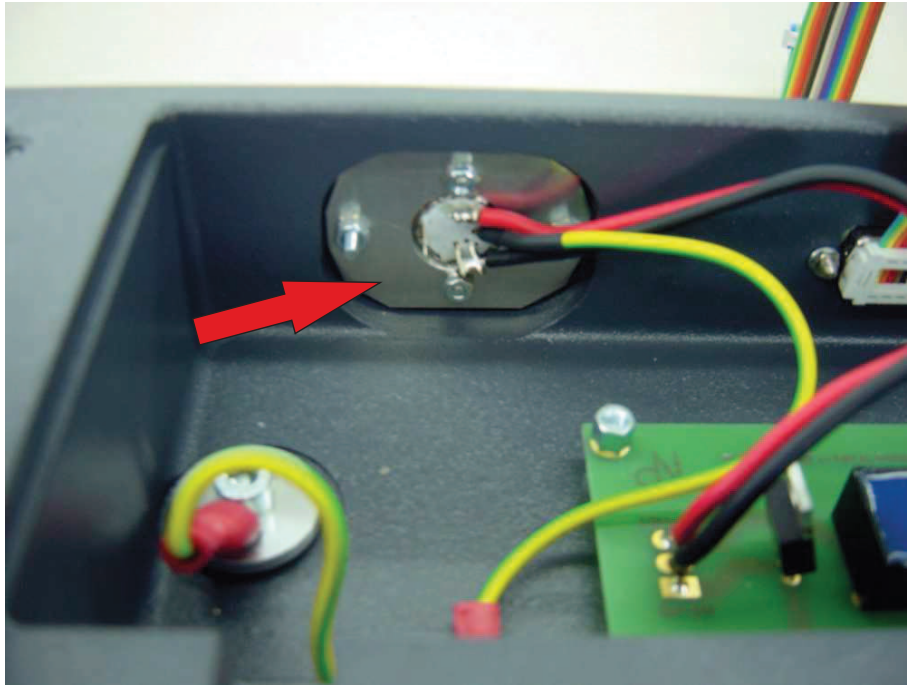

Look for orientation of the cables

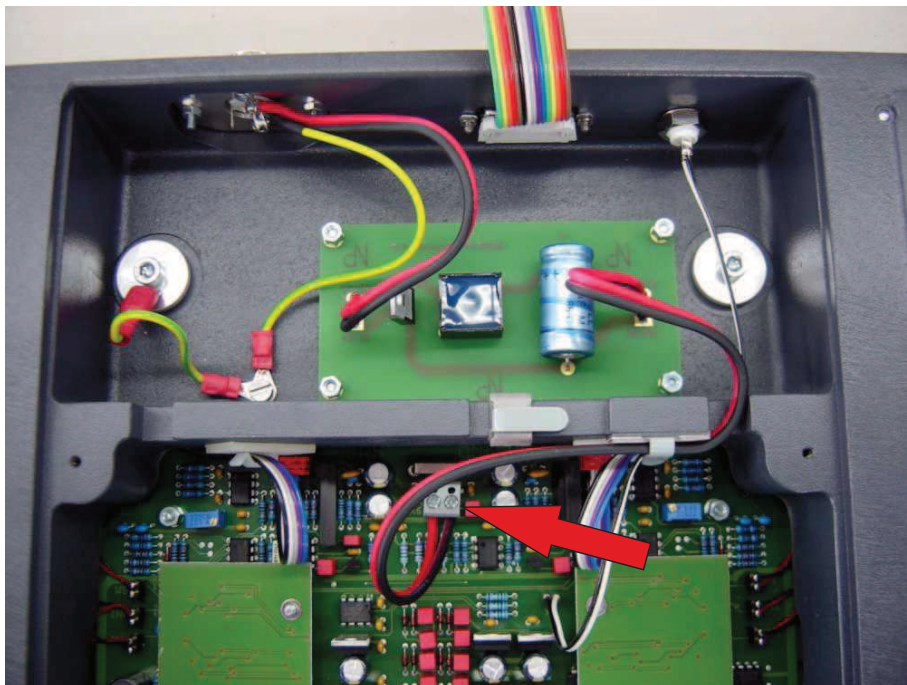


Connect input power (look for right polarity!)



**Address:**  
Im Grindel 6  
CH-8932 Mettmenstetten  
Switzerland

**Phone:** +41 (0)44 776 33 66  
**Fax:** +41 (0)44 776 33 65  
**E-Mail:** [info@tablestable.com](mailto:info@tablestable.com)  
**Internet:** [www.tablestable.com](http://www.tablestable.com)

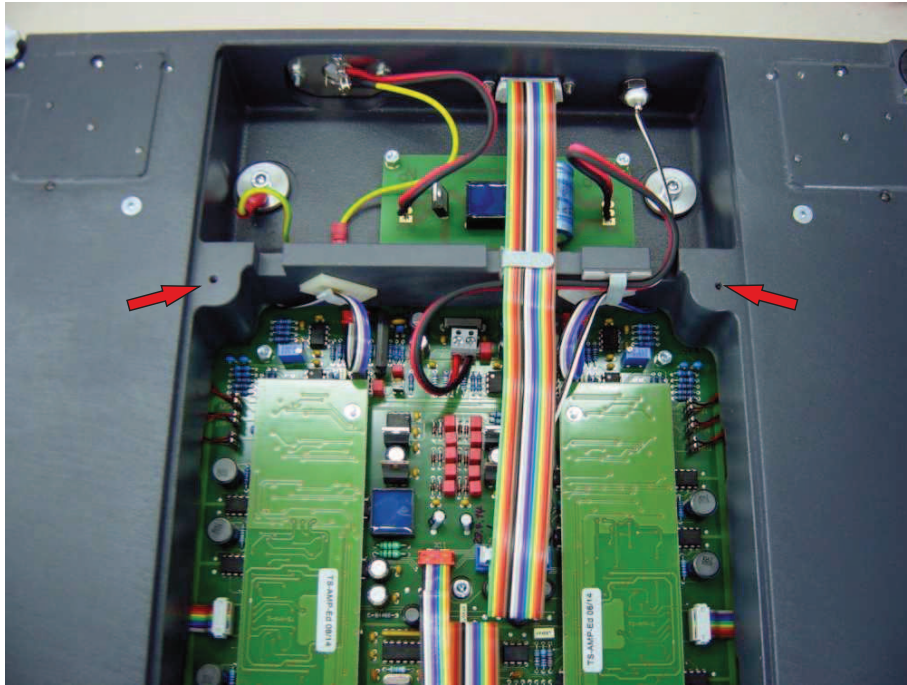

Attach bottom cover

